

Enabling the Cook More Keys for the Encore Oven

1. Ensure the oven is off or cooling down.

2. Press the “i” key.

3. Press the Down Arrow key.

4. Select “Set Options” by pressing the adjacent soft key.

5. Enter the pass code 9 4 2 8 and press ENTER.

6. Set “Cook More” to ON by pressing the adjacent soft key.

7. Press the “On/Off” key to return to the off or cooling down screen.

8. Turn the oven back on. After a cook cycle finishes, the “Brown More,” “Cook More,” and “Cook and Brown” keys will be enabled.

