



9 ESPLOSO RICAMBI

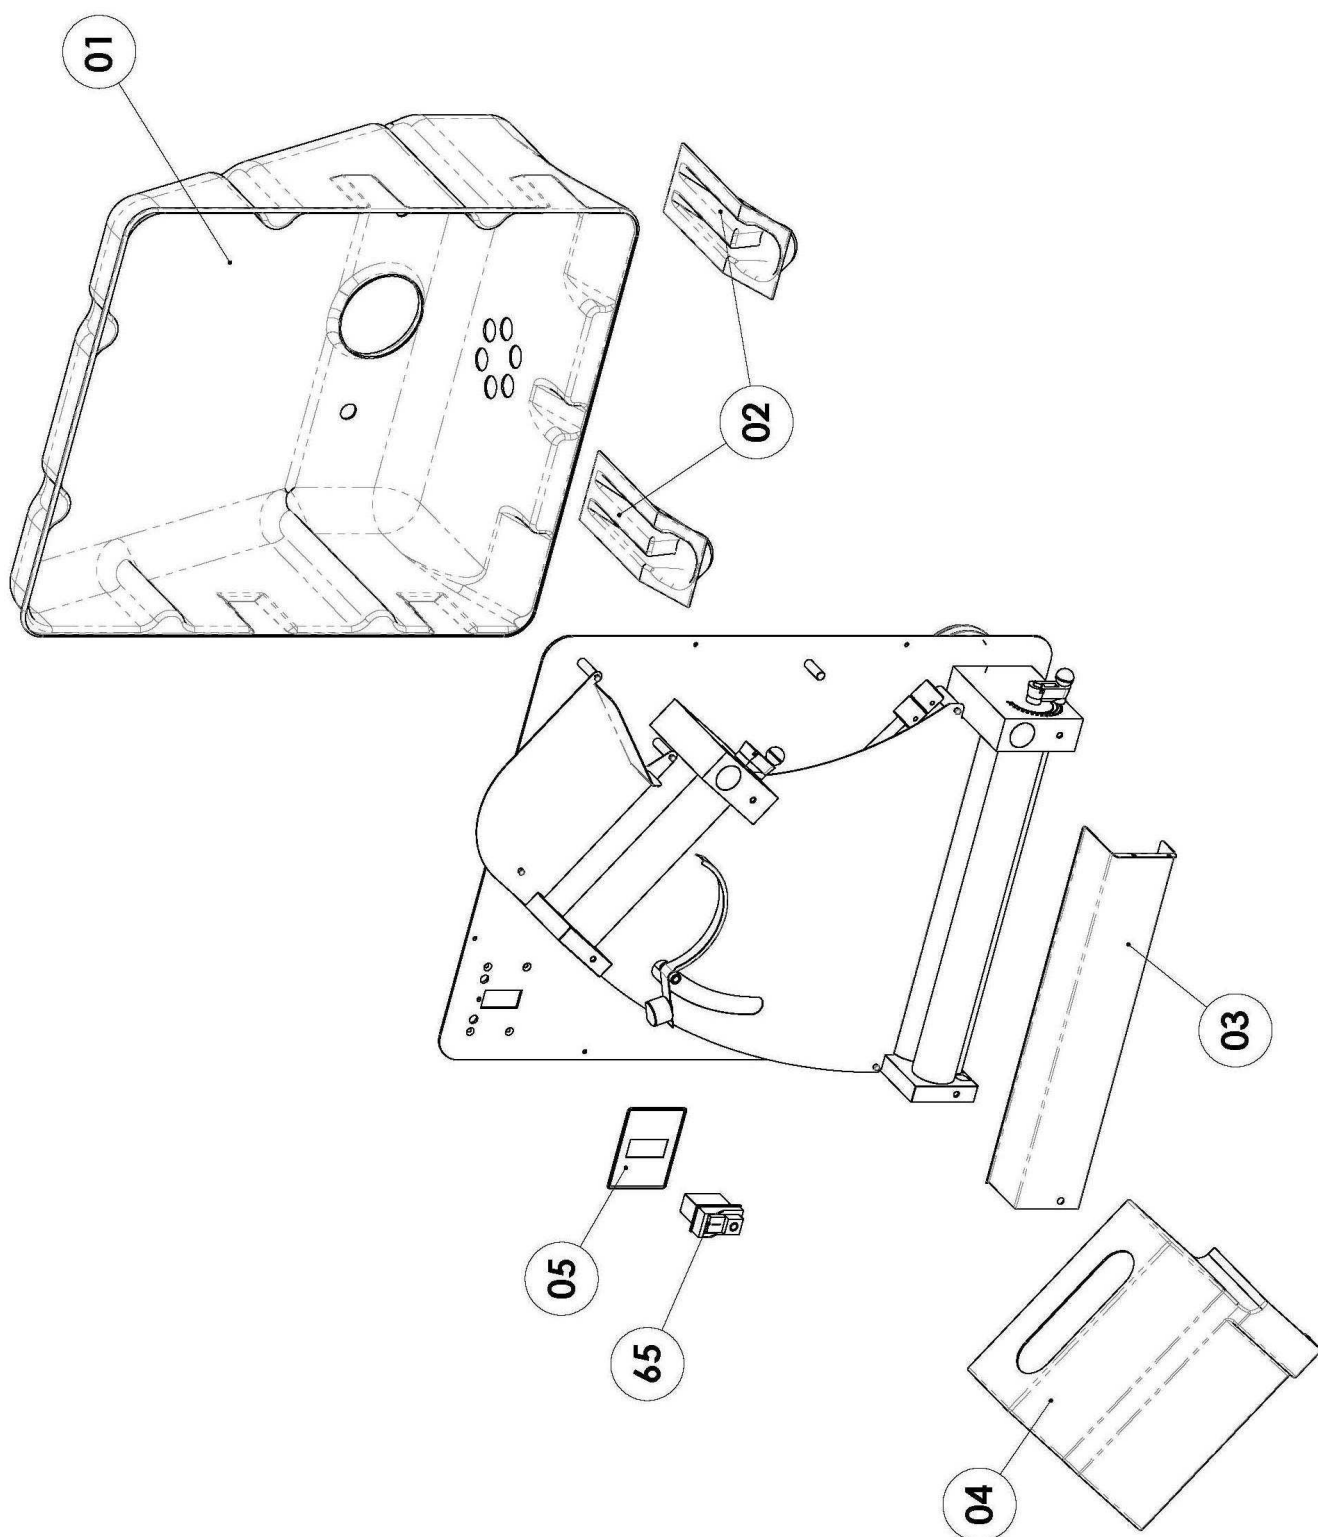


RM32-RM42


(20100326_1700000_1)

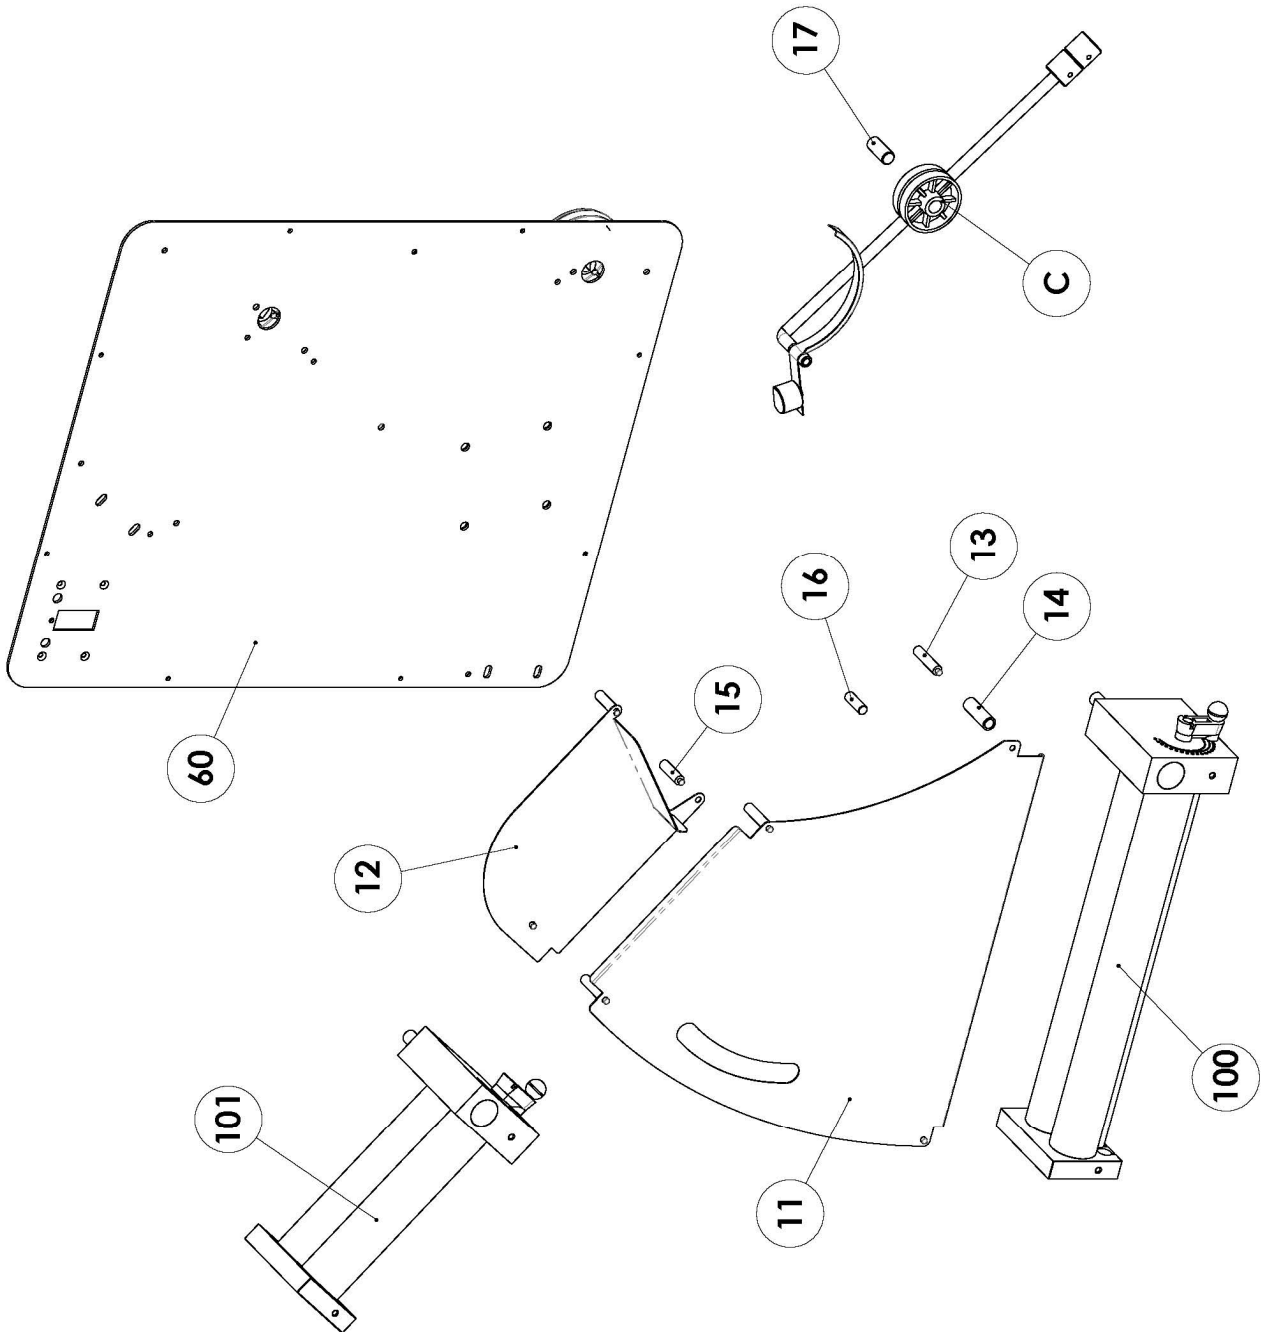


RM32-RM42

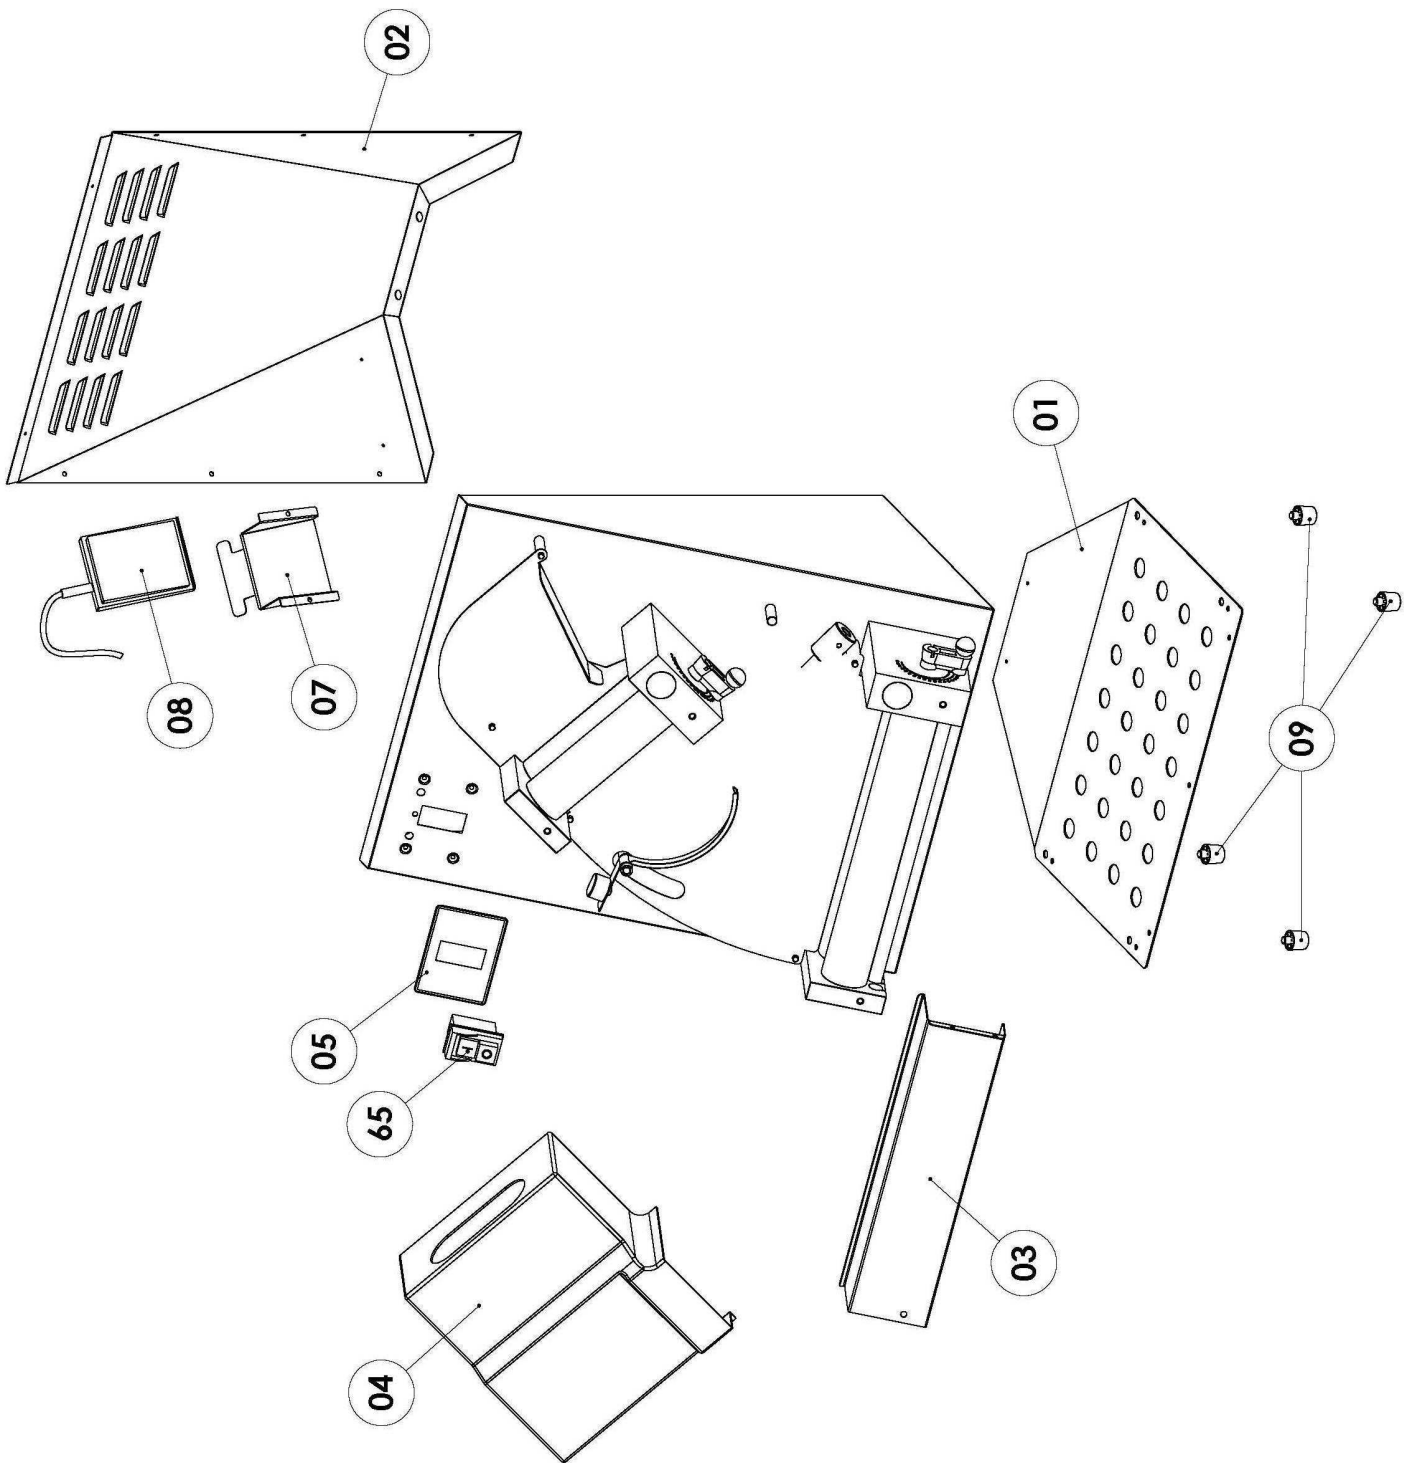

RM32A-RM42A-RM35A-RM45A (20100326_1700020_1)

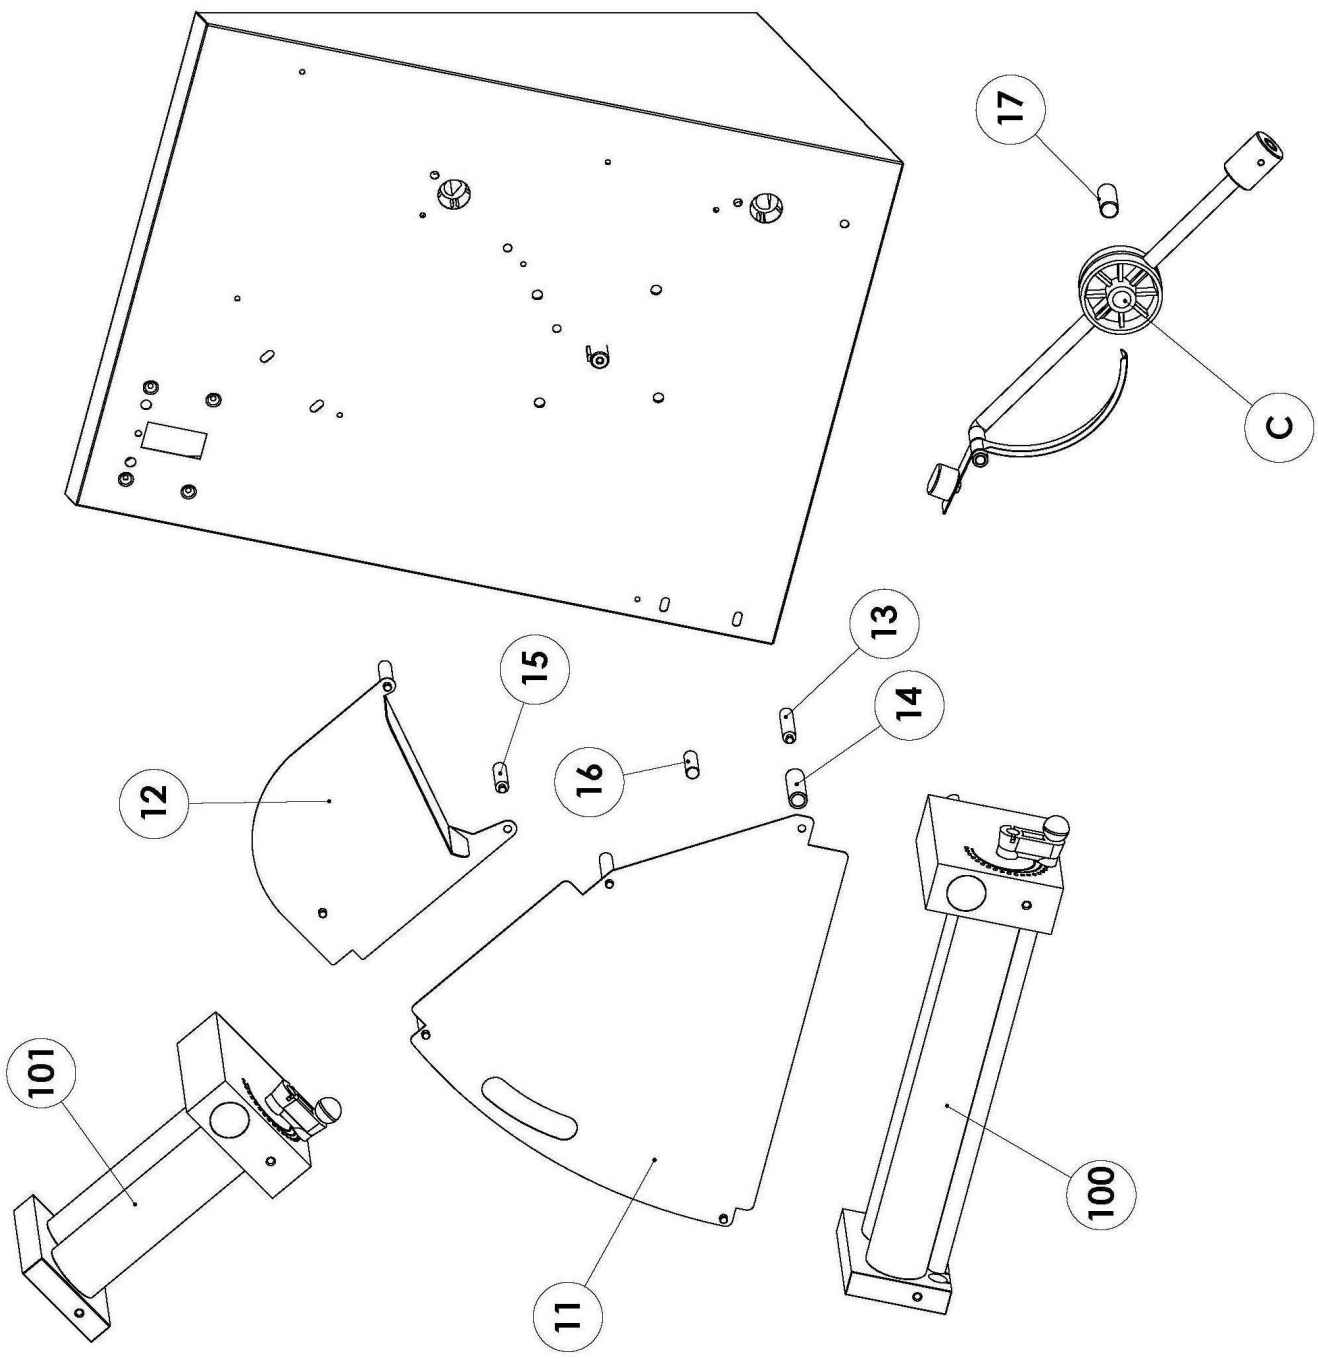


RM32A-RM42A-RM35A-RM45A

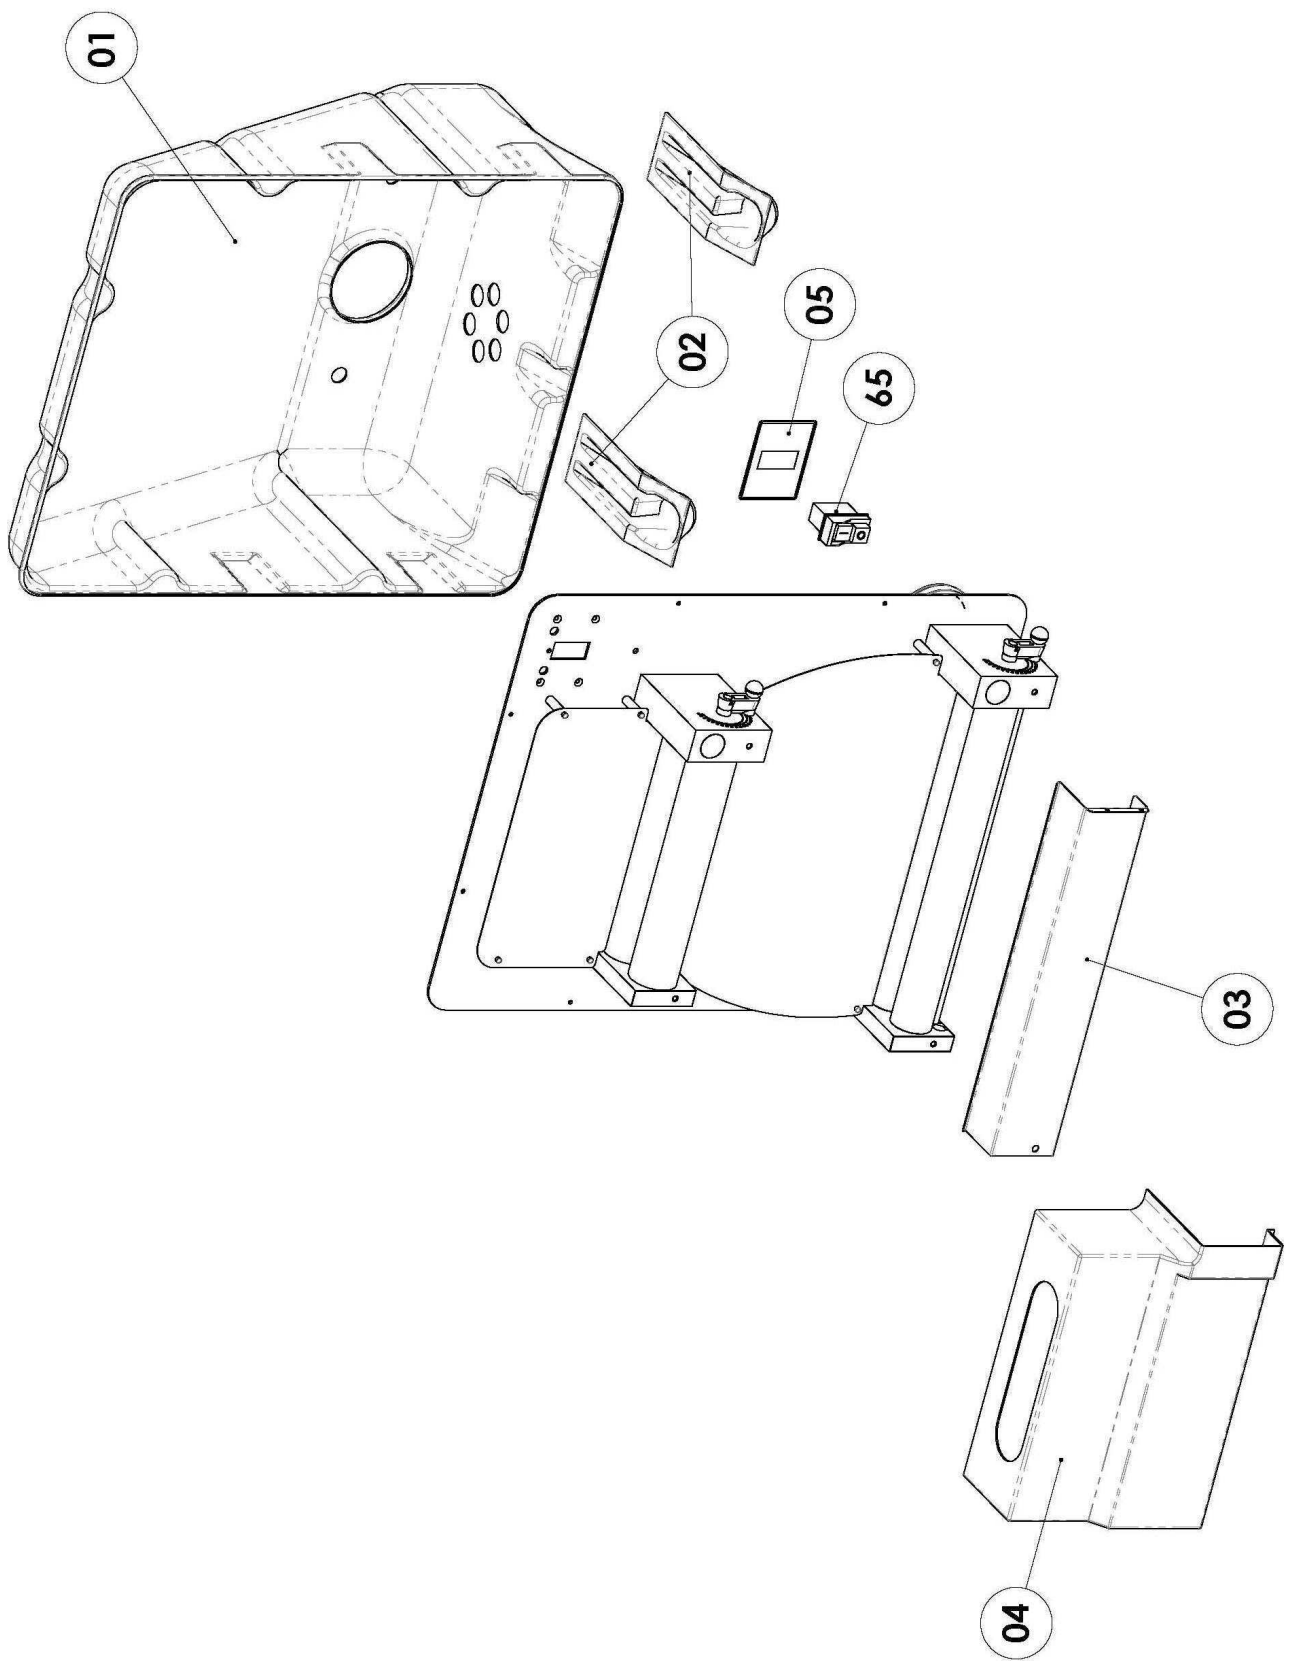


RM32T-RM42T


(20100326_1700060_1)

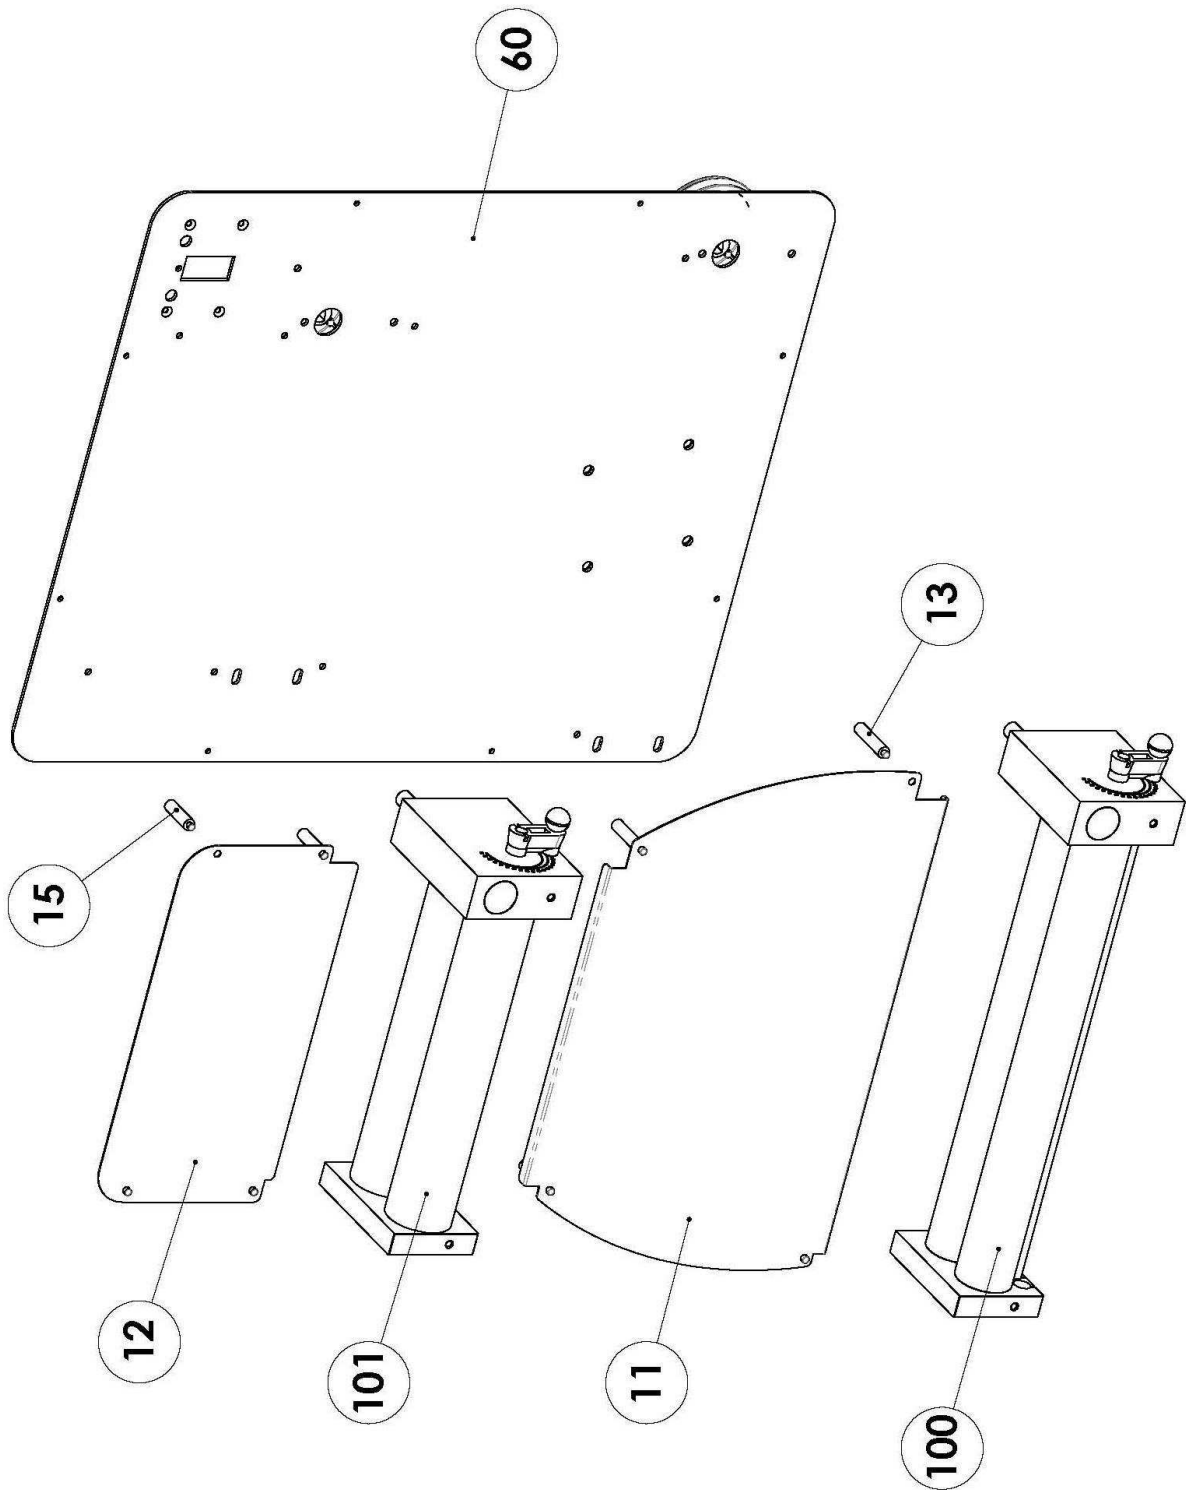


RM32T-RM42T

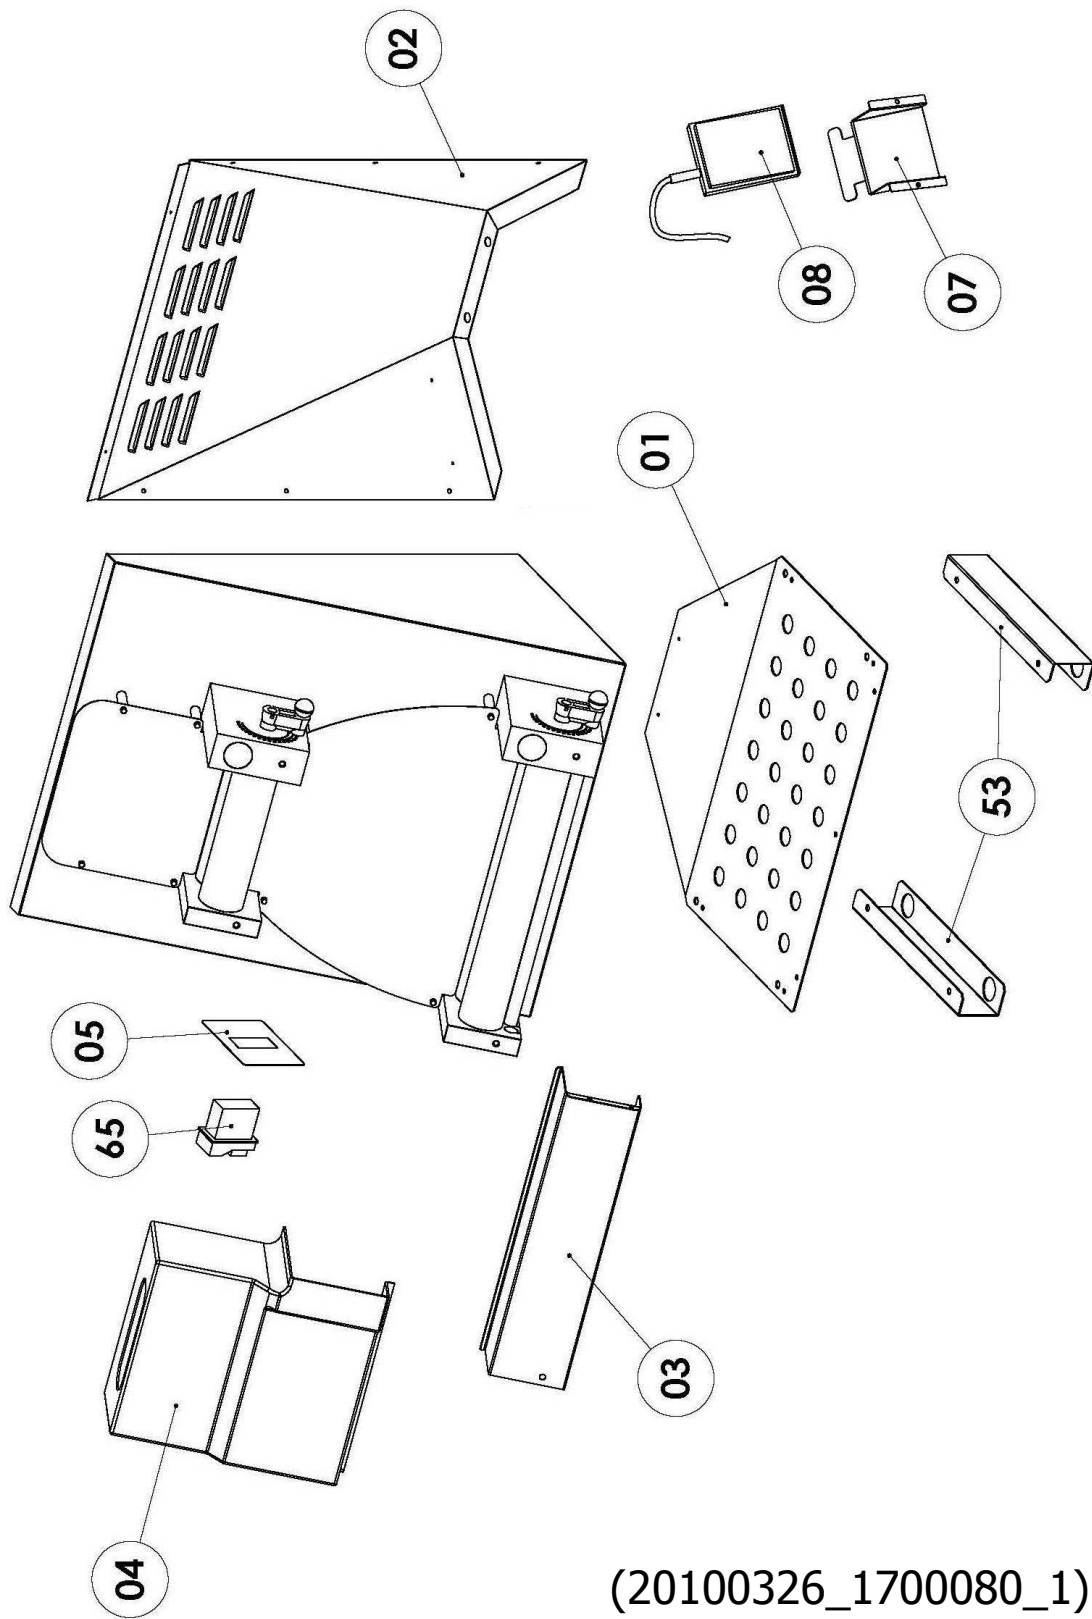

RM32TA-RM42TA-RM35TA-RM45TA

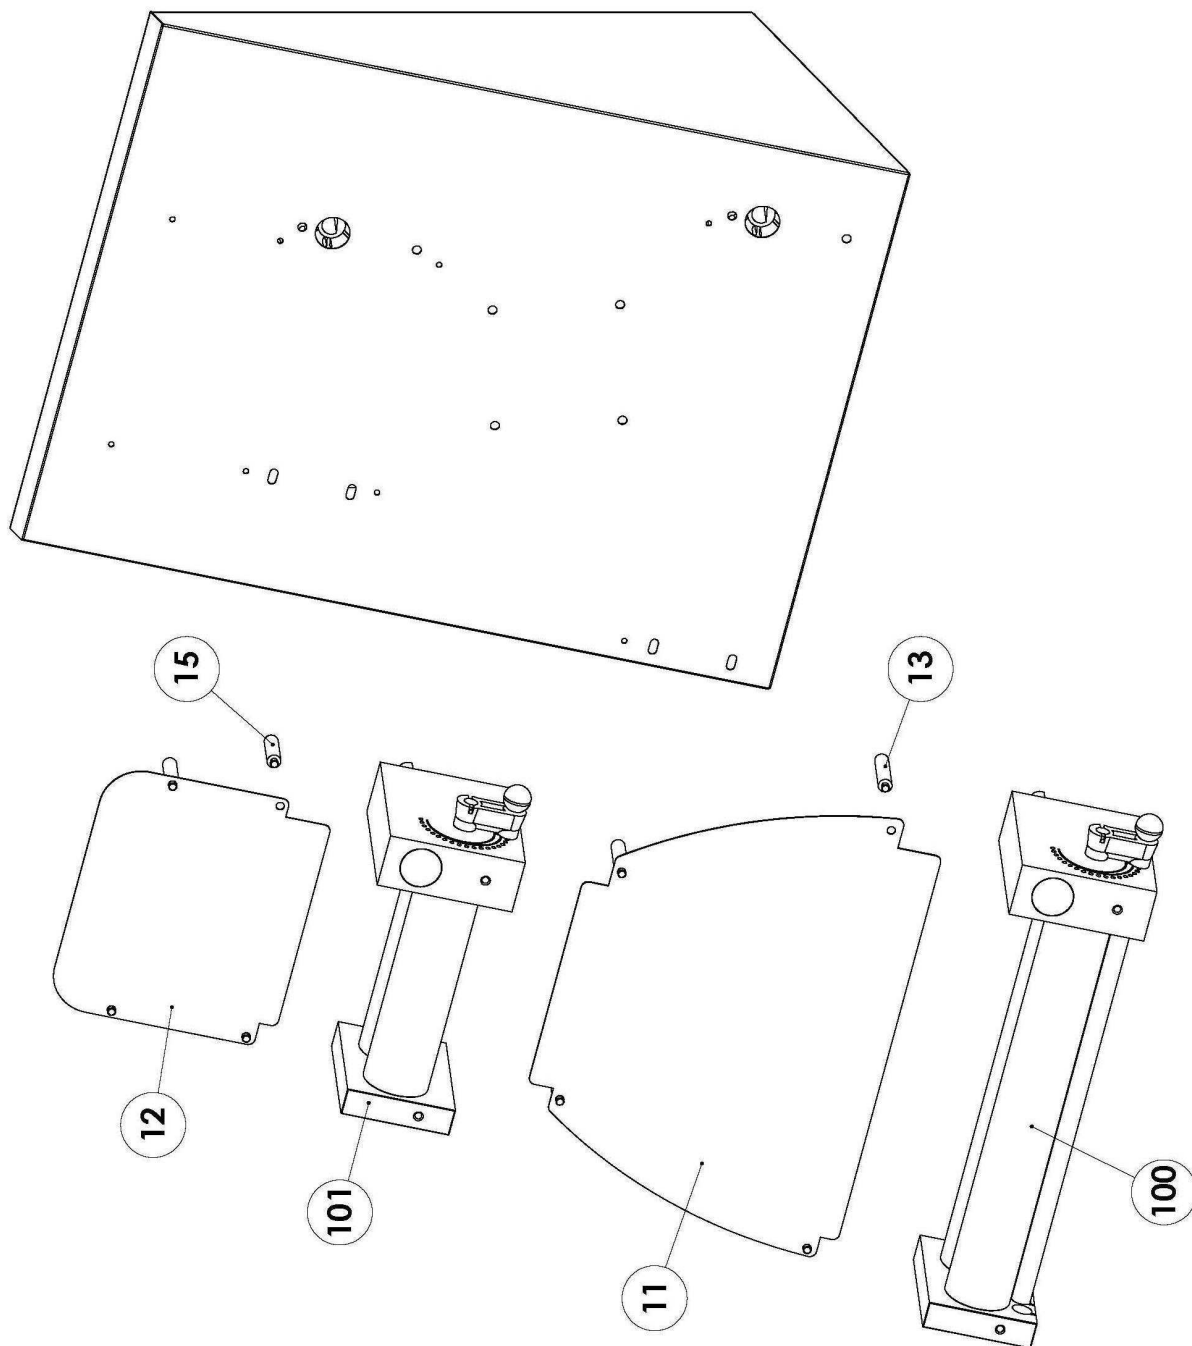


RM32T-RM42T-RM35T-RM45T

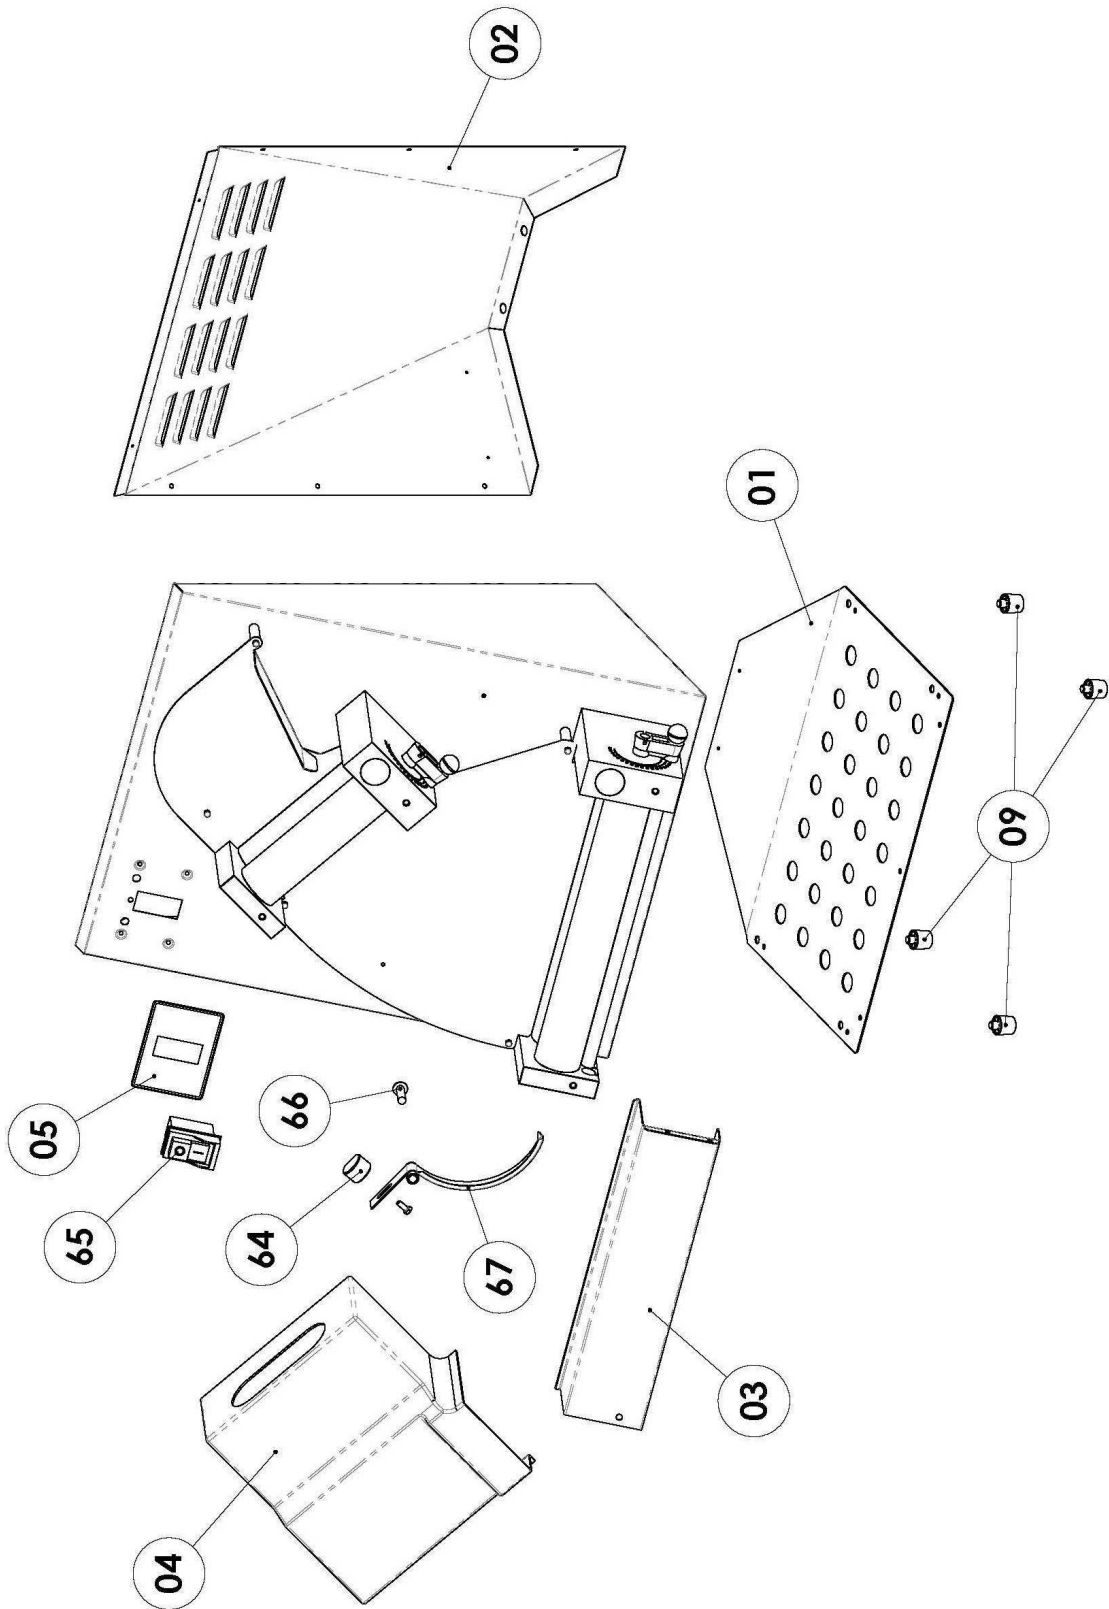


RM32AE-RM42AE

(20100326_1700130_1)


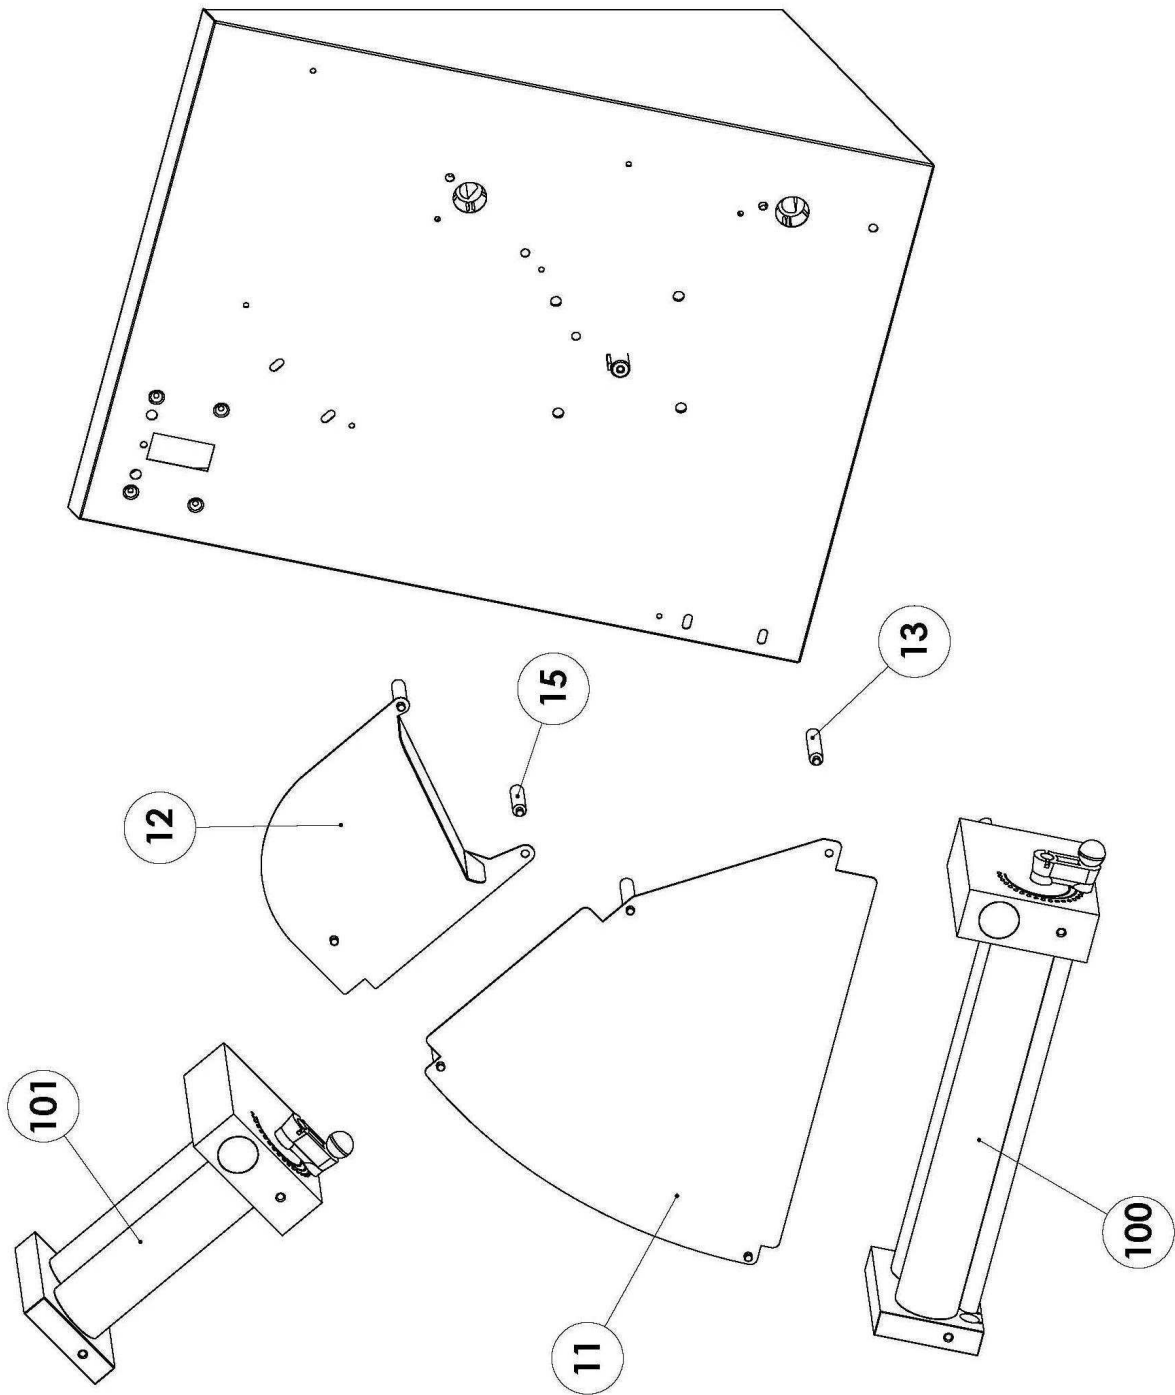


RM32AE-RM42AE

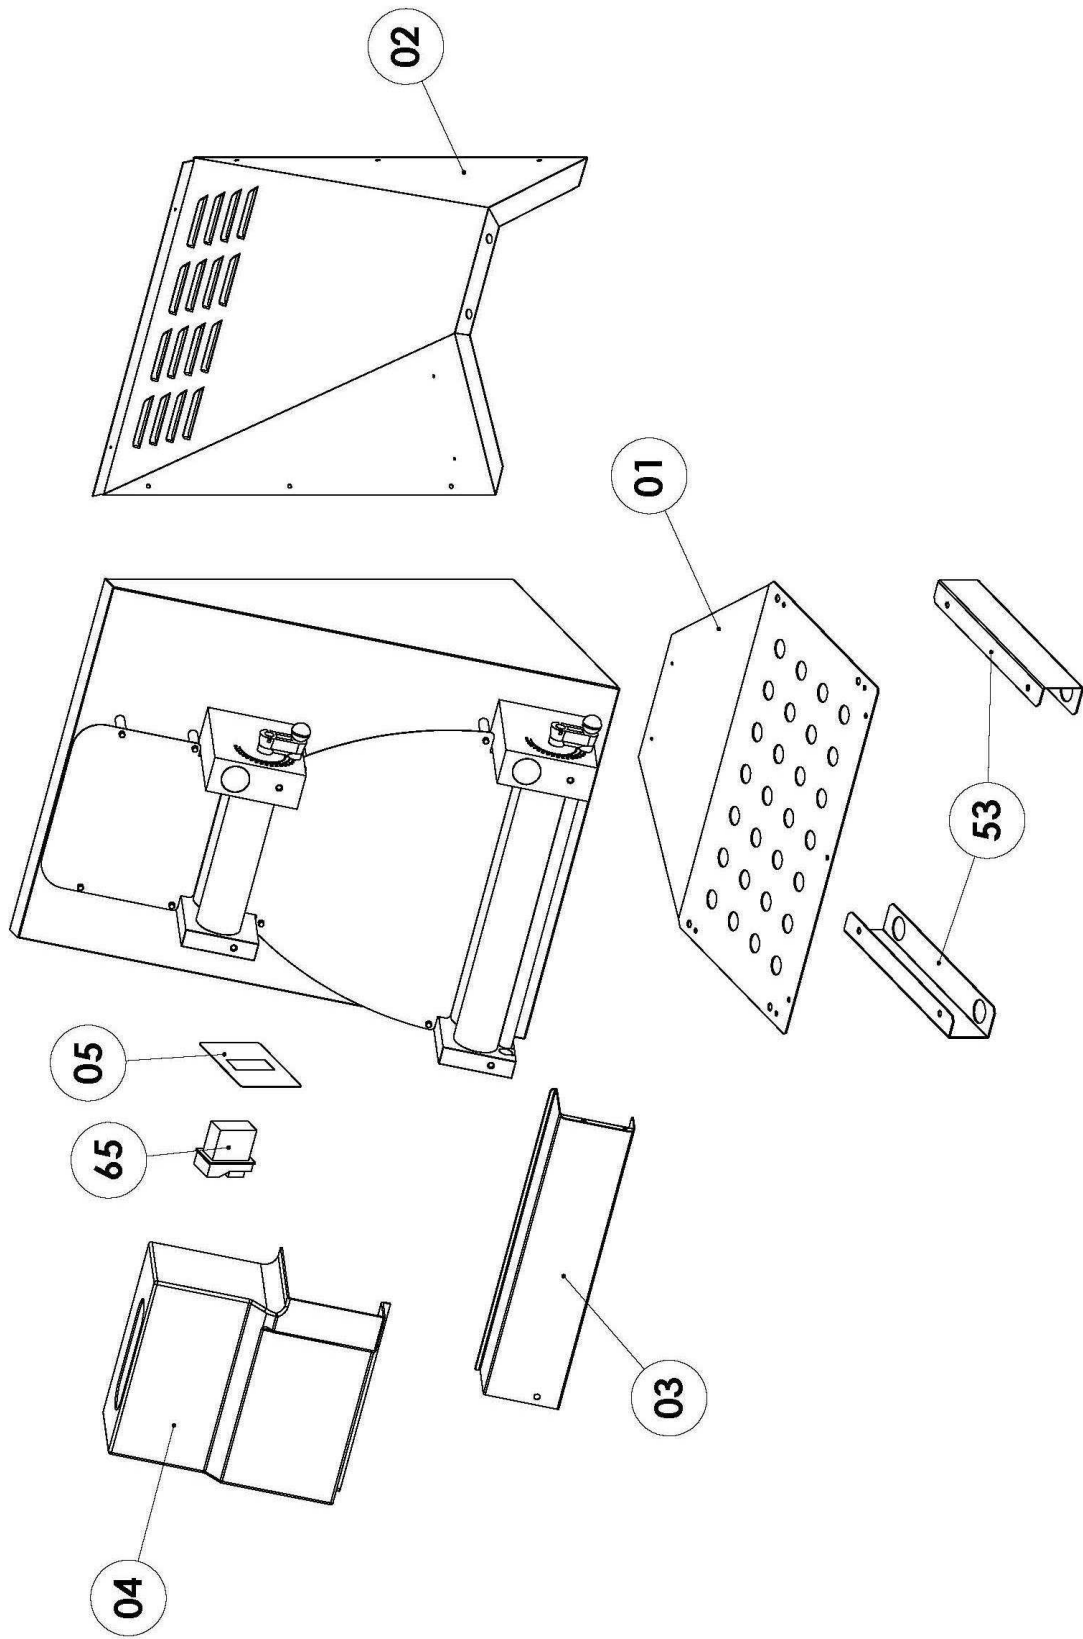


RM42TAE

(20100326_1700150_1)

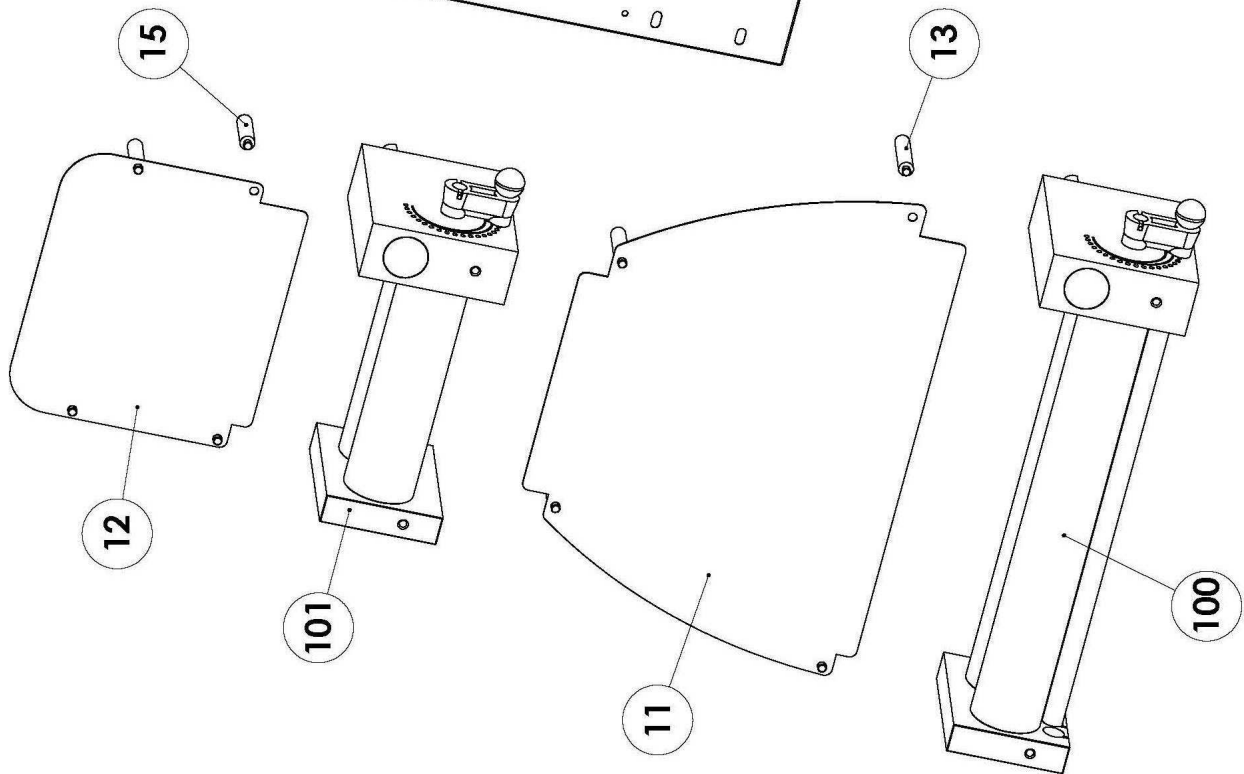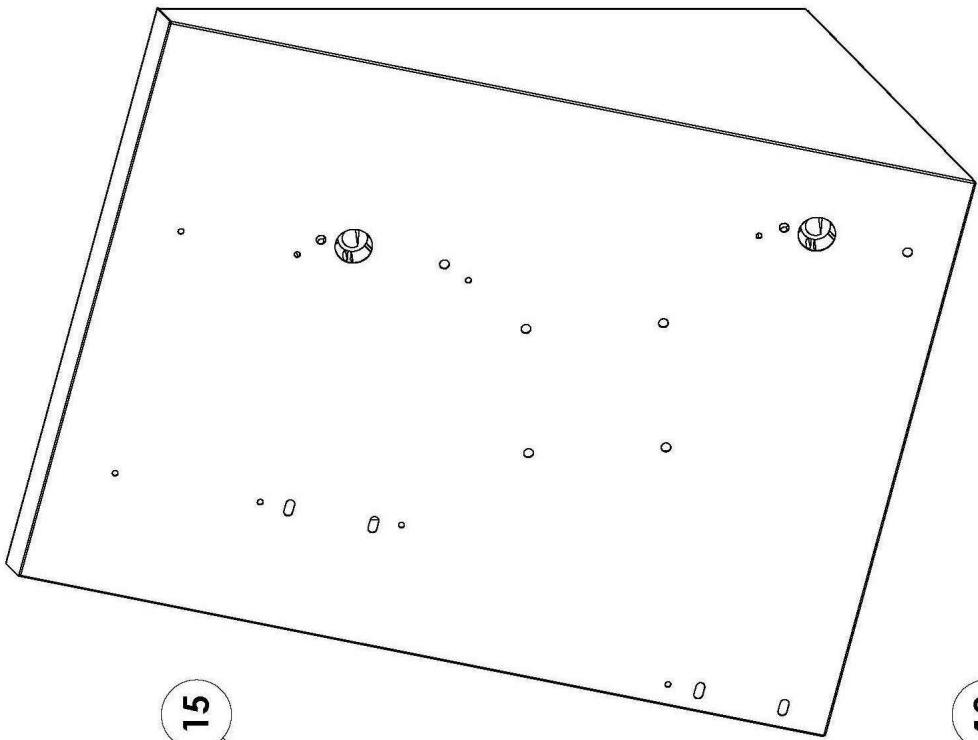


RM42TAE

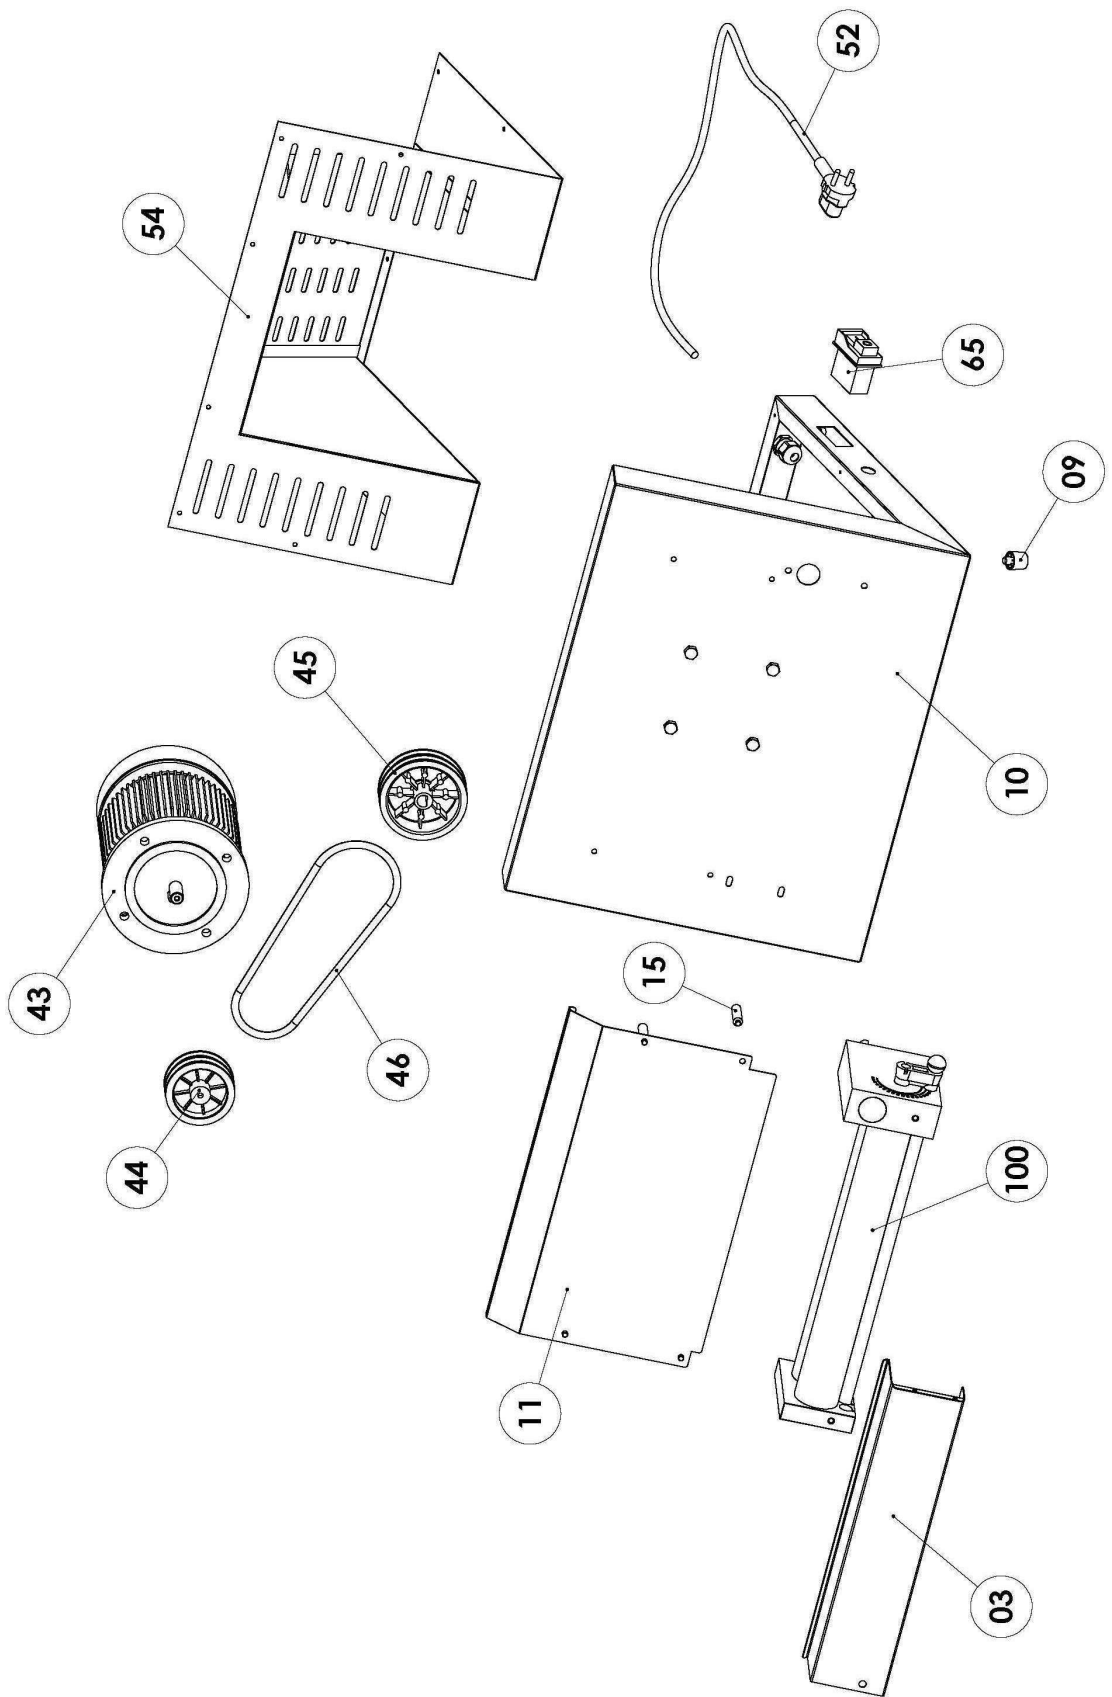

M35-M42


(20100326_RM100040_1)

Part. 100

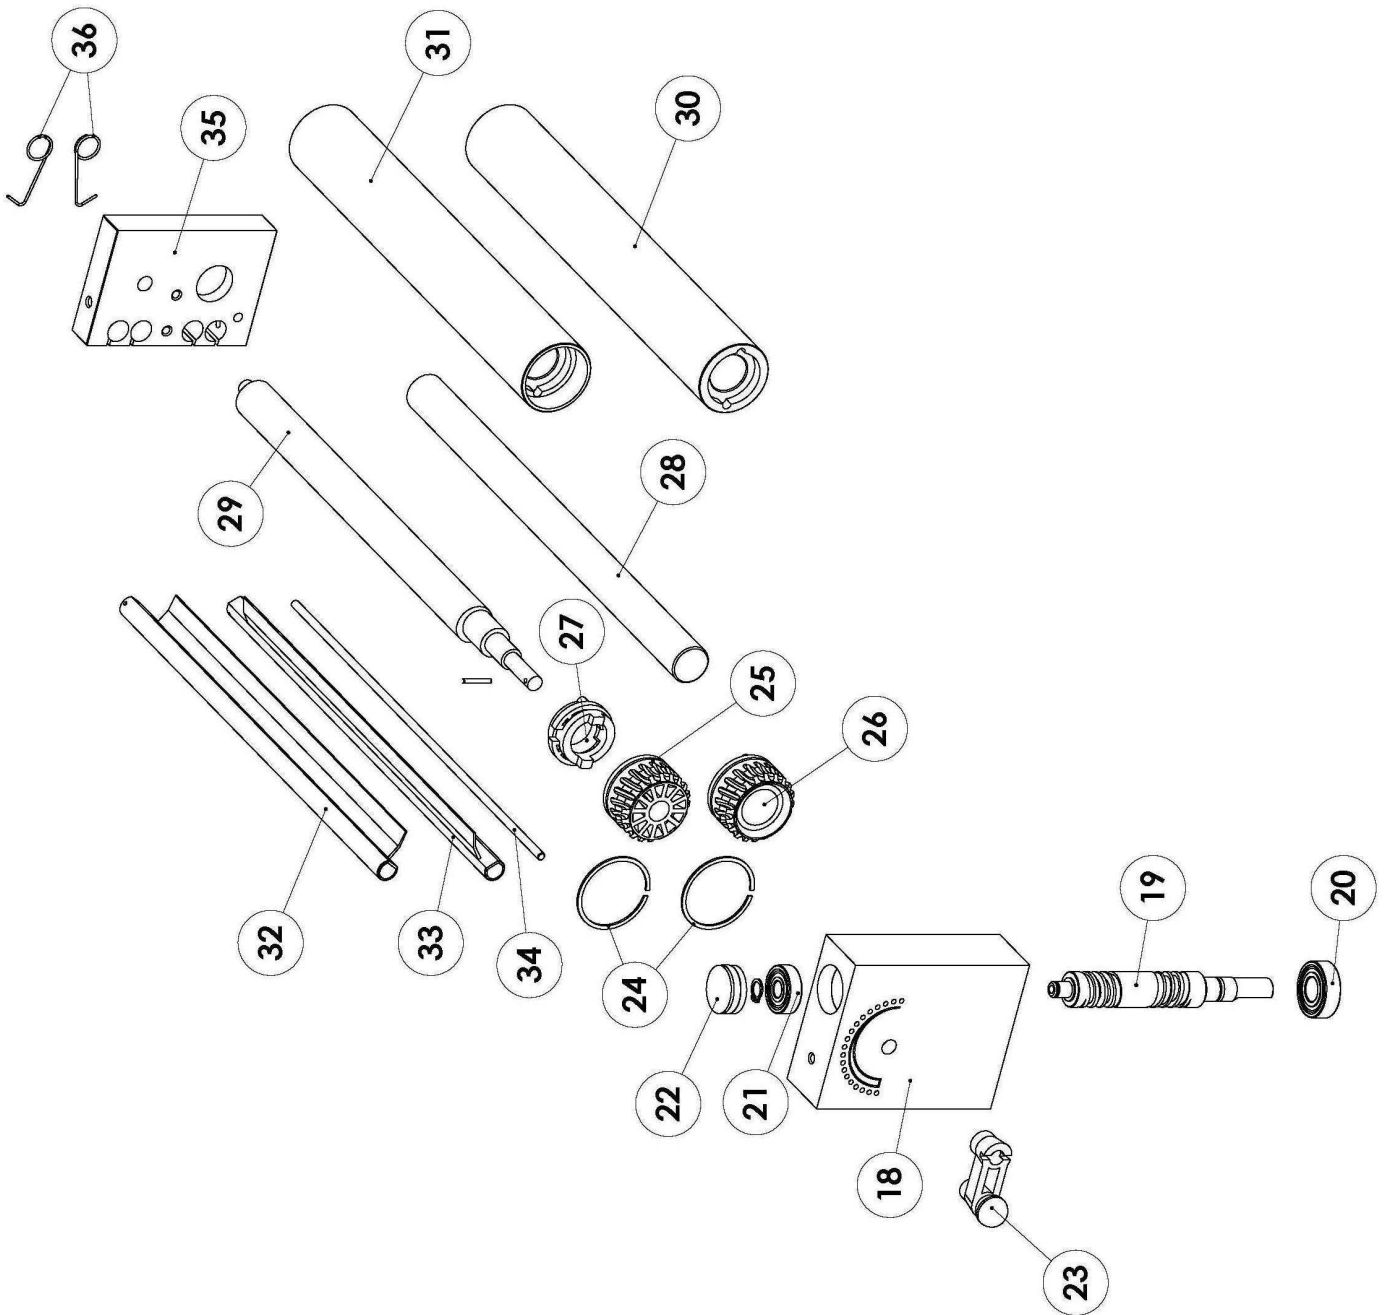


RM32-RM42
RM32A-RM42A-RM35A-RM45A
RM32T-RM42T-RM35T-RM45T
RM32AE-RM42AE
RM42TAE
M35-M42


Part. 101

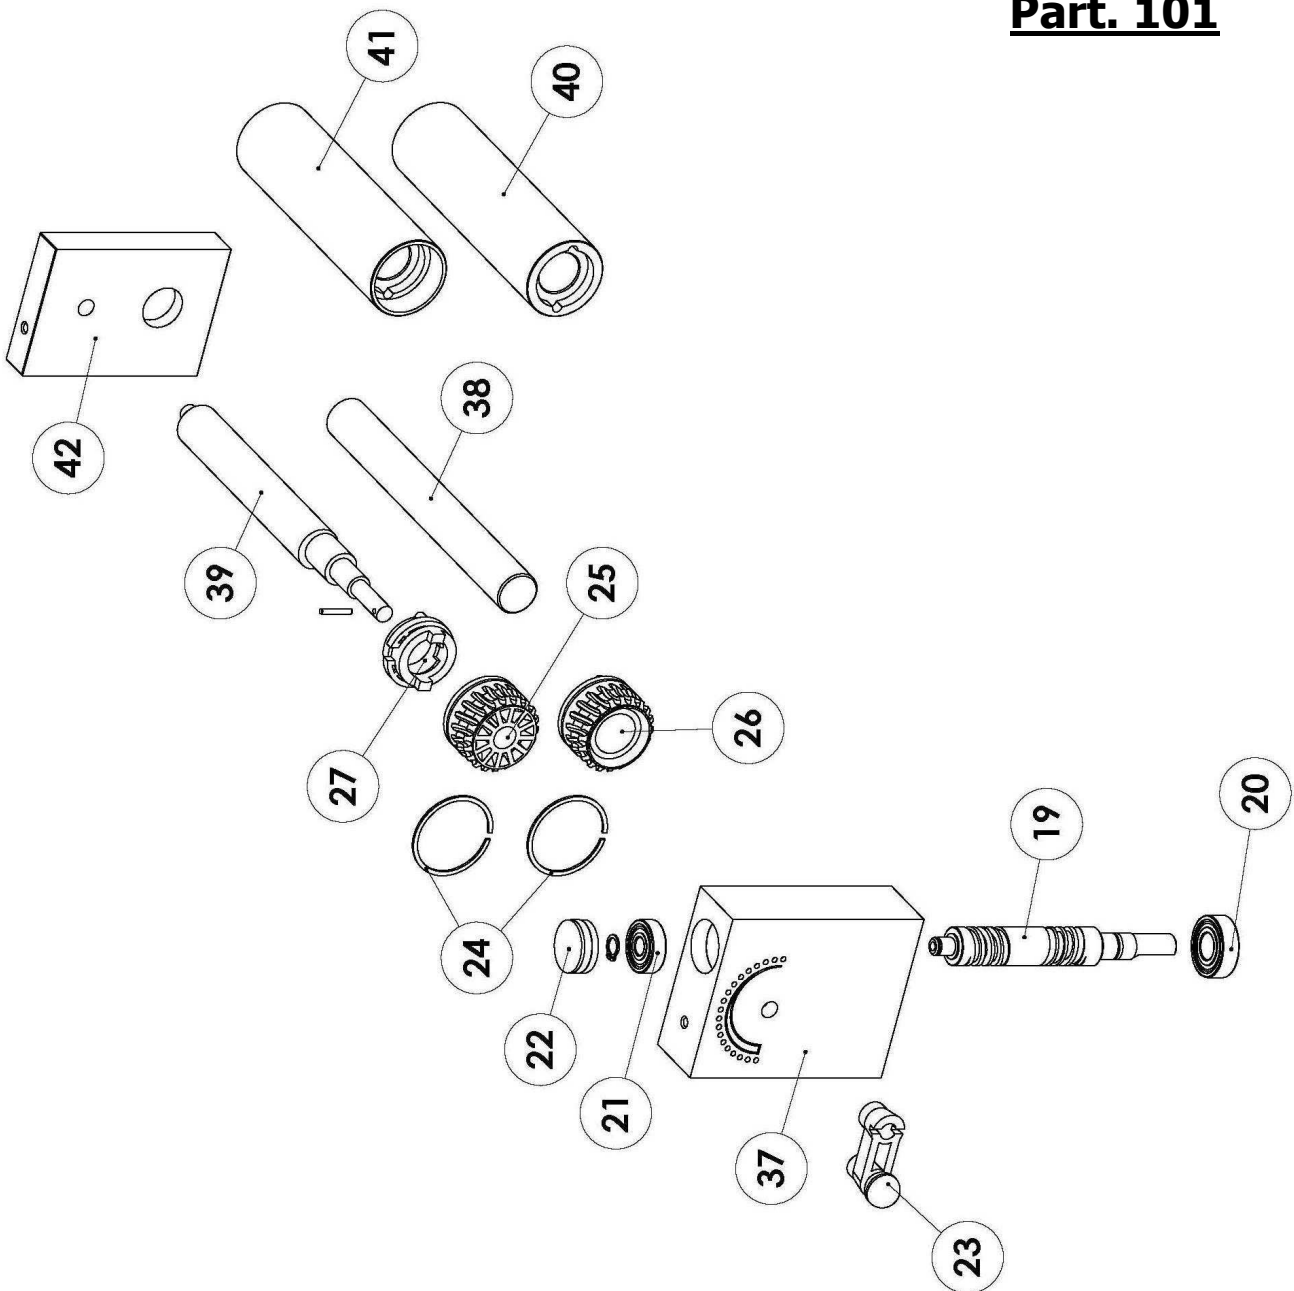

**RM32-RM42
RM32A-RM42A-RM35A-RM45A
RM32T-RM42T-RM35T-RM45T
RM32AE-RM42AE
RM42TAE**

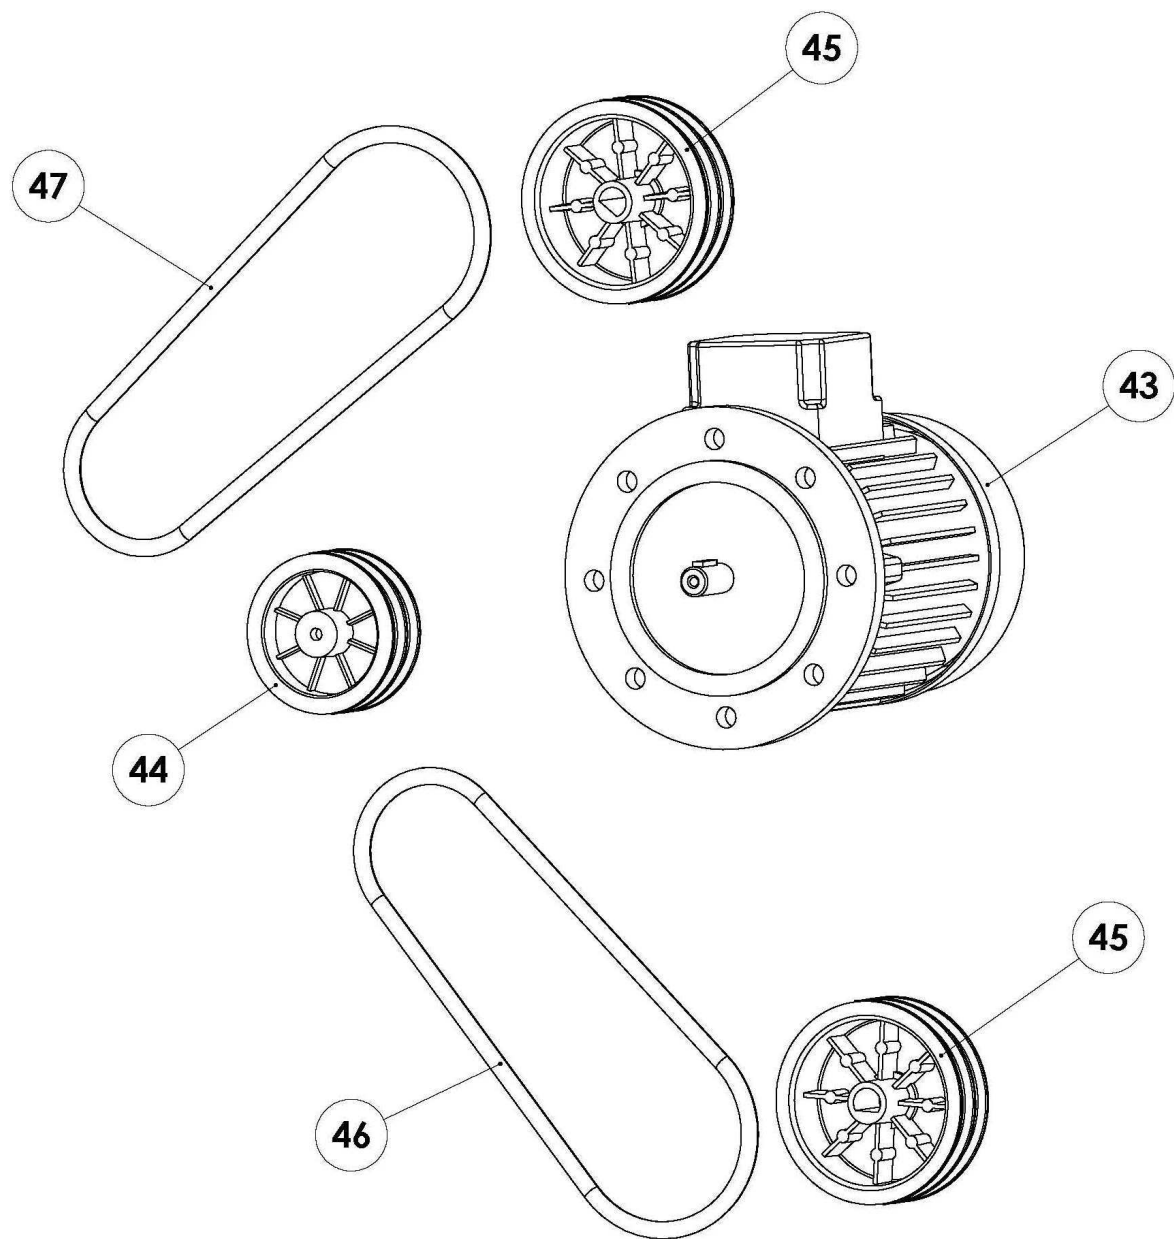

RM32-RM42
RM32A-RM42A-RM35A-RM45A
RM32T-RM42T-RM35T-RM45T
RM32AE-RM42AE
RM42TAE

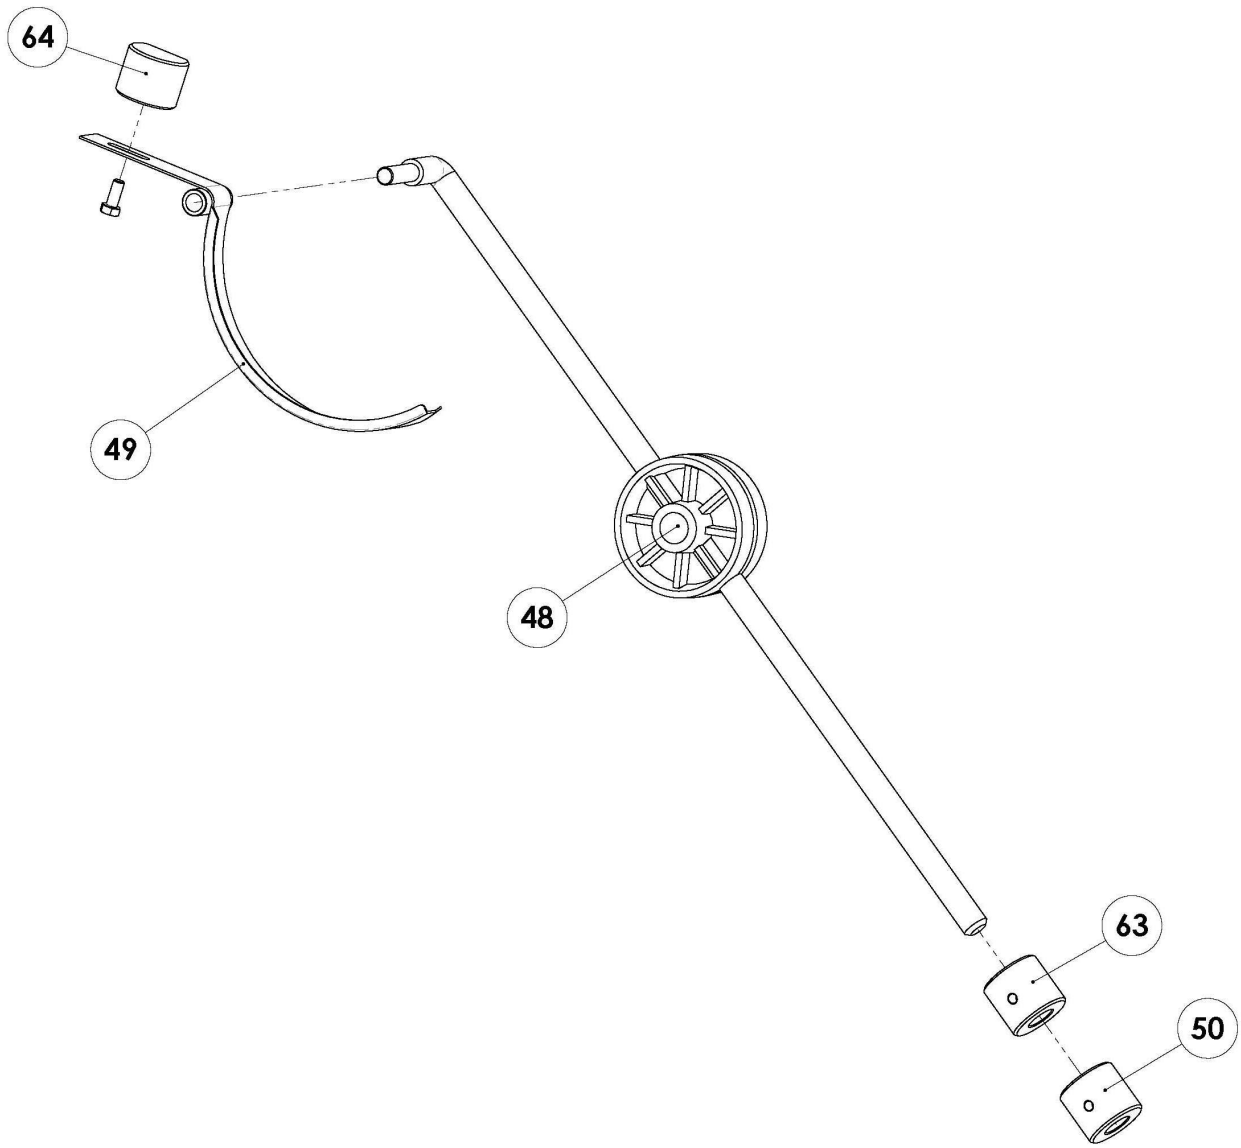

RM32-RM42
RM32A-RM42A-RM35A-RM45A
RM32T-RM42T-RM35T-RM45T